




KINSLEY SOFA SET
552466

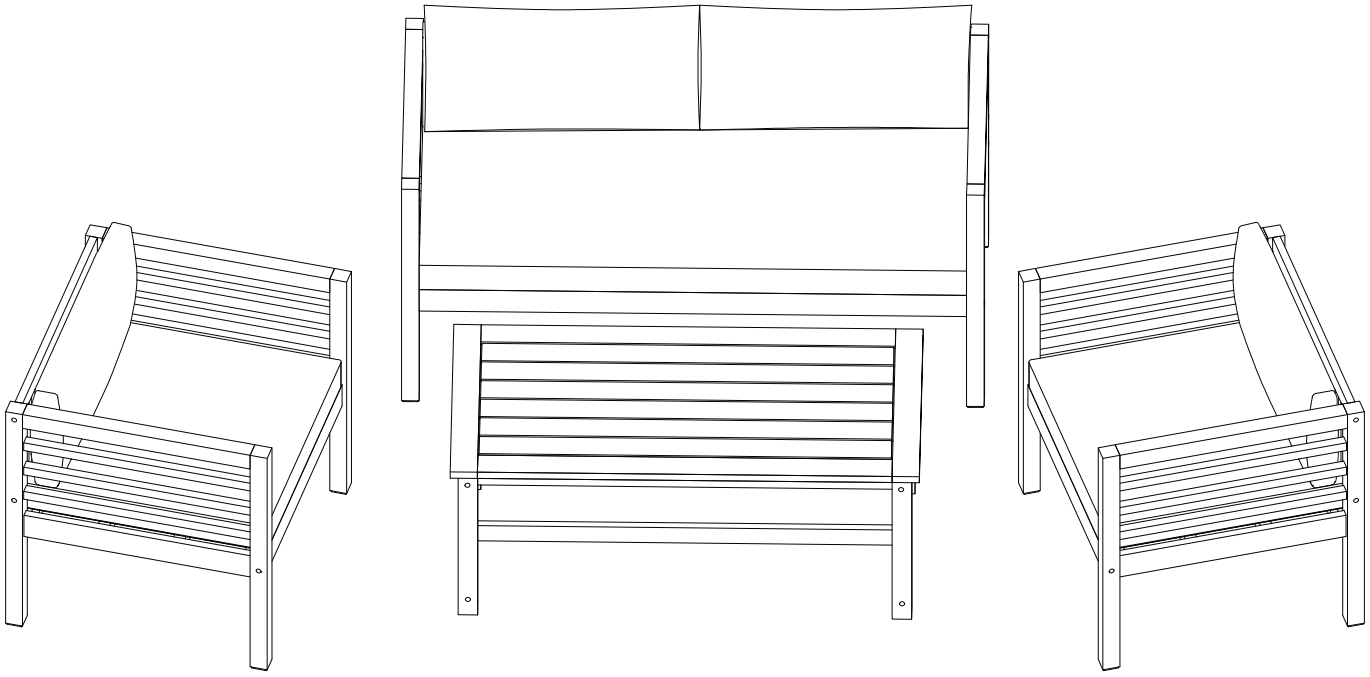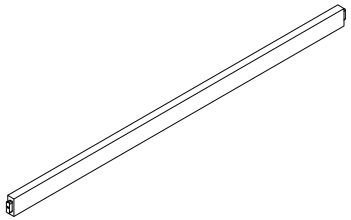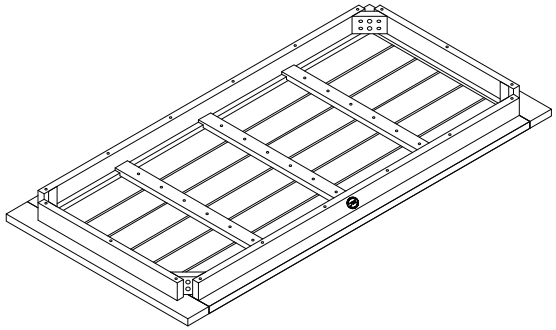


 A1 = 2 pcs	 B1 = 2 pcs	 C1 = 2 pcs	 D1 = 1 pc	 E1 = 1 pc

Bolt M6x60 mm  T1 =8 pcs	Screws M6x55 mm  T3 = 2 pcs
	Screws M6x100 mm  T4 = 4 pcs
Washer Ø16xØ6x1 mm  T2 = 8 pcs	Allen key 4 mm  T5 =1 pc

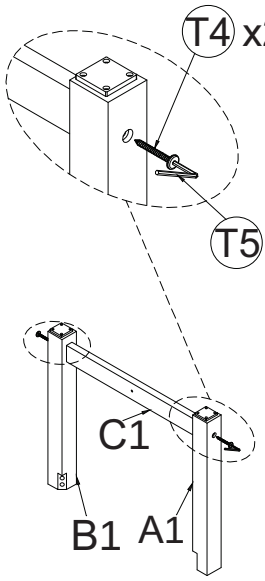


x2


STEP 1

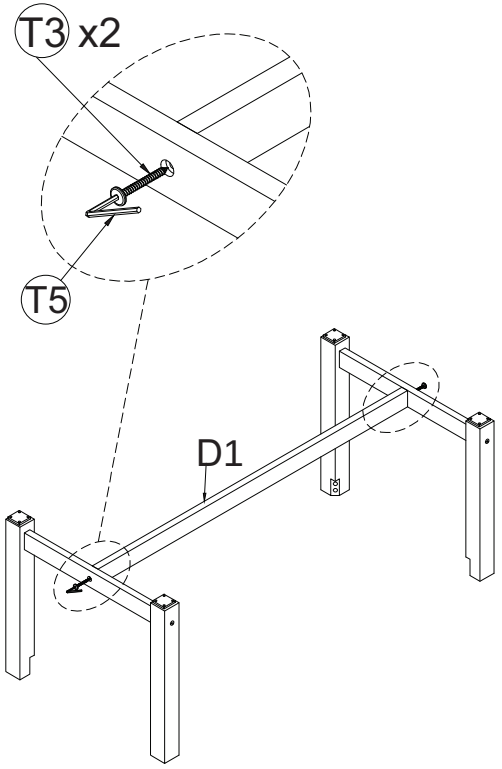







STEP 2

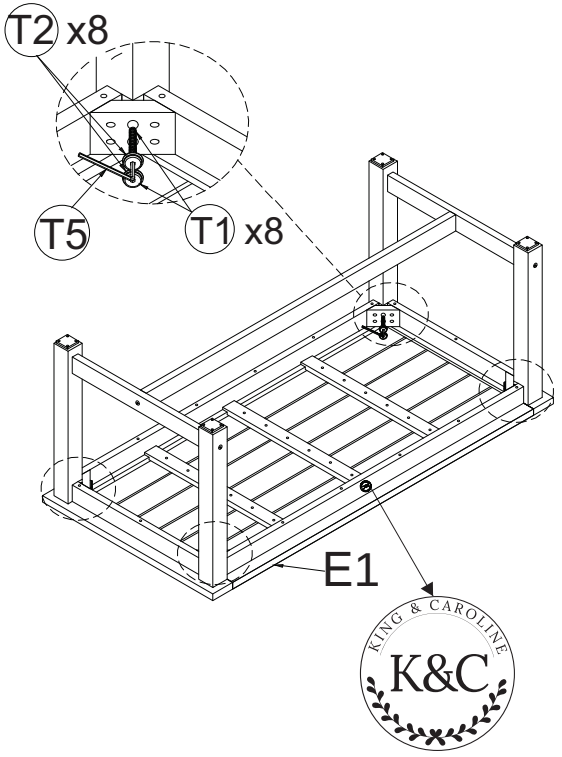


STEP 3

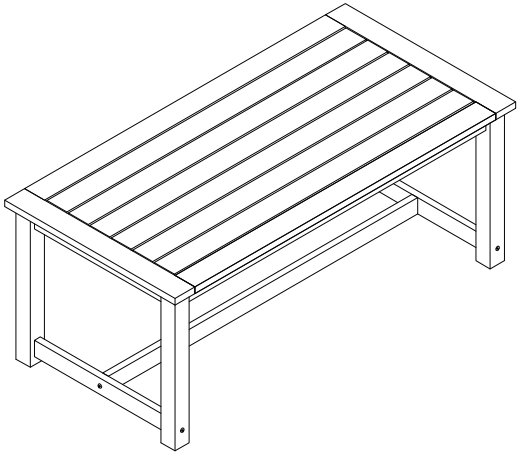


FINISHED

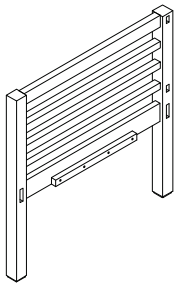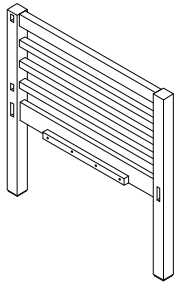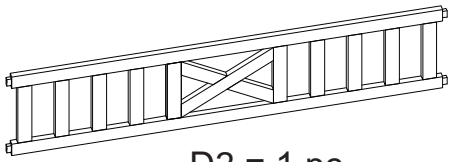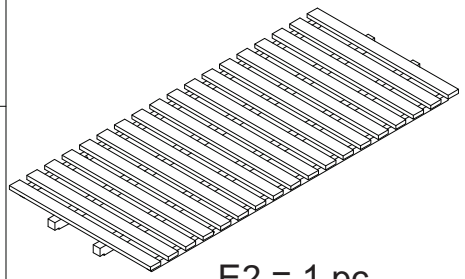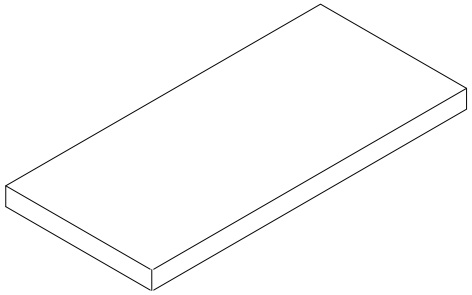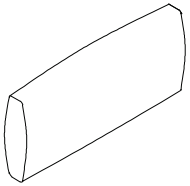 A2 = 1 pc	 B2 = 1 pc	 C2 = 2 pcs  D2 = 1 pc	 E2 = 1 pc	 F2 = 1 pc	 G2 = 2 pcs


Bolt M6x90 mm  T1 = 4 pcs	Nuts M6x13 mm  T4 = 4 pcs
Screws M6x70 mm  T2 = 4 pcs	Allenkey 4 mm  T5 = 1 pc
Screws M6x35 mm  T3 = 4 pcs	Allenkey 4 mm  T6 = 1 pc

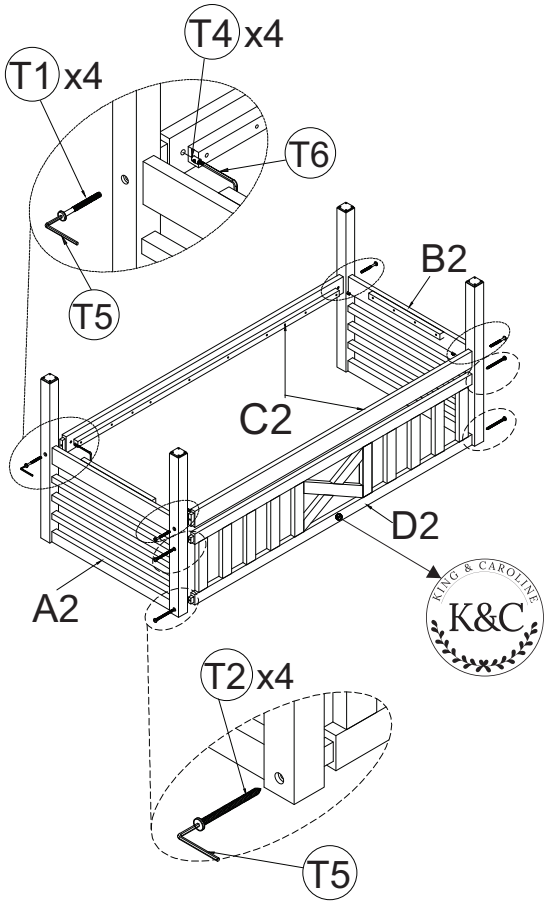


STEP 1

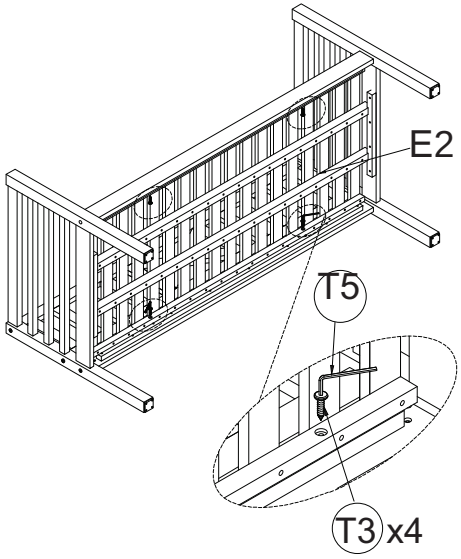


STEP 2

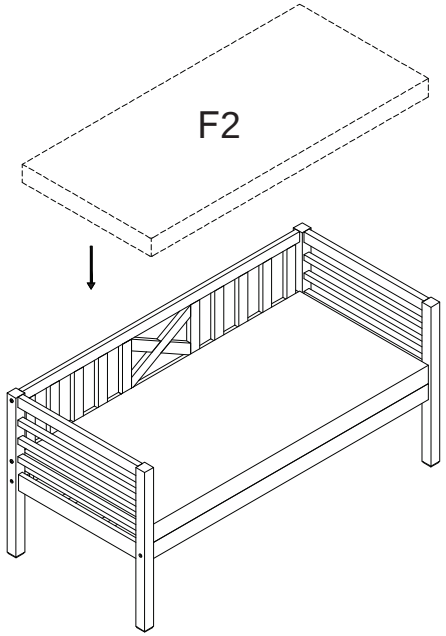



STEP 3

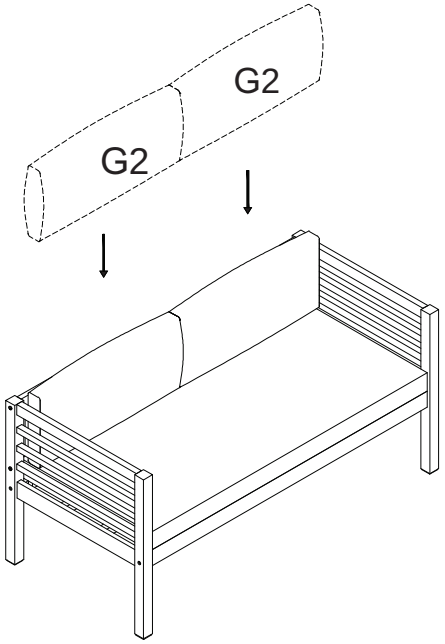



FINISHED

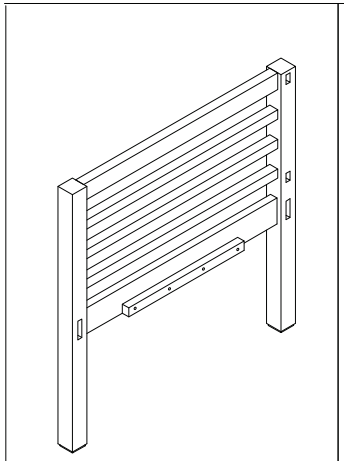

A3 = 2 pcs

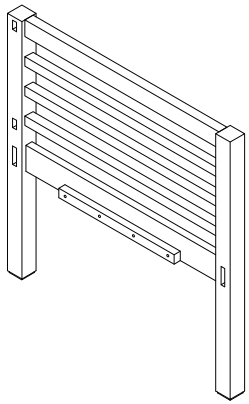

B3 = 2 pcs

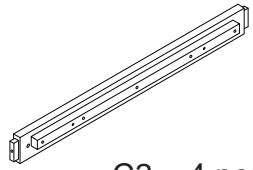
C3 = 4 pcs

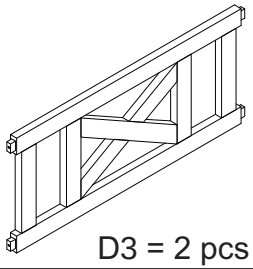

D3 = 2 pcs

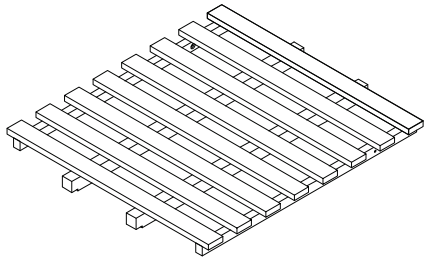
E3 = 2 pcs

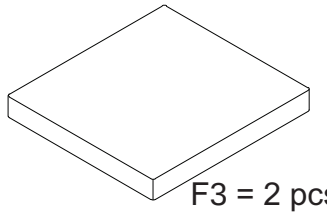

F3 = 2 pcs

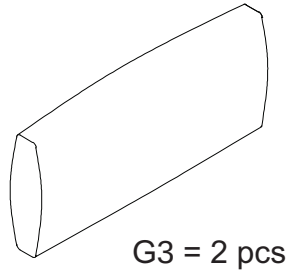
G3 = 2 pcs


Bolt M6x90 mm  T1 = 8 pcs	Nuts M6x13 mm  T4 = 8 pcs
Screws M6x70 mm  T2 = 8 pcs	Allen key 4 mm  T5 = 1 pc
Screws M6x35 mm  T3 = 8 pcs	Allen key 4 mm  T6 = 1 pc

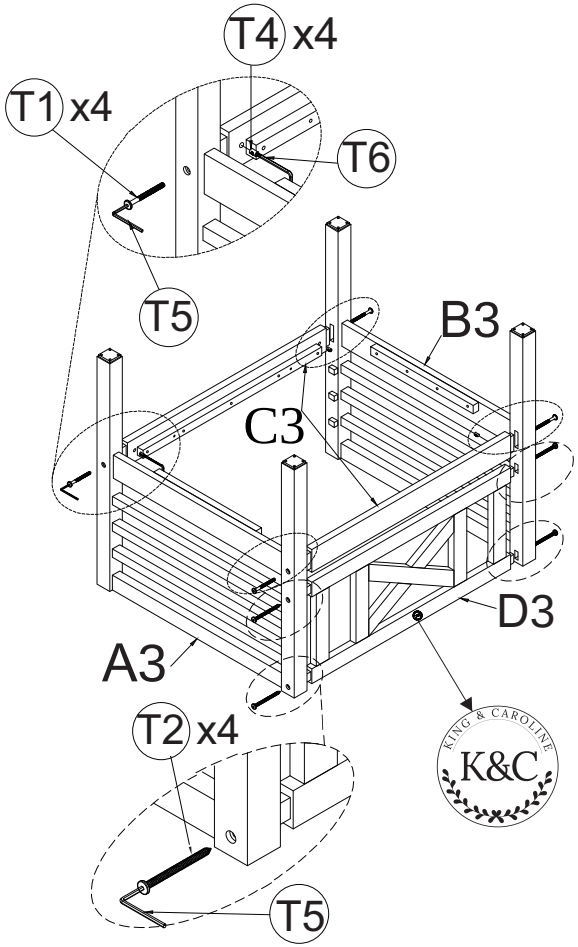


STEP
1

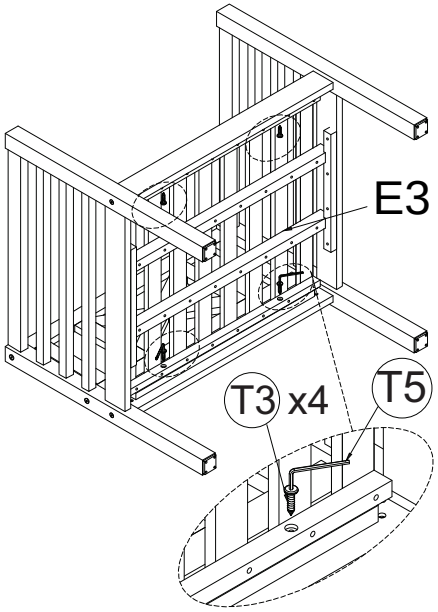

STEP
2

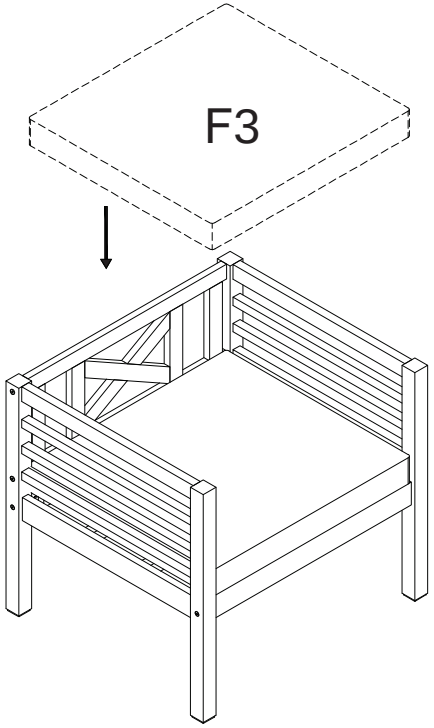

STEP
3

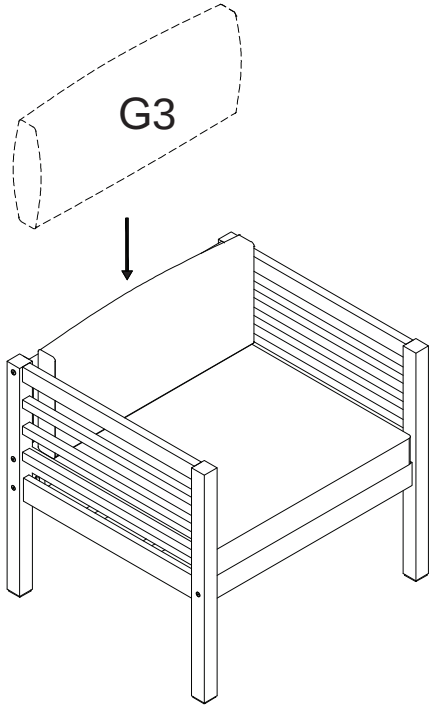

x2

FINISHED

Acacia:

Daily exposure to intense ultraviolet radiation from sunlight will deteriorate the wood material over time.
Use a furniture cover of good quality to extend the life of your furniture.
During winter time, the best is to store in a dry and well-ventilated place.
Clean with damp, soft cloth and soap that does not contain detergents.

Fabric:

Daily exposure to intense ultraviolet radiation from sunlight fade cushions over time.
Use a furniture cover of good quality to extend the life of your cushions.
When heavy rain, the best way is to place in a waterproof cushion box or indoors in a dry, cool place with good
ventilation.
Wash outdoor cushions with a mix of mild soap and water and rinse thouroughly. Stand them on end and allowto air
dry completely before usage.
Light stains can be removed as above. For more heavy stains, remove cushion covers and treat with a commercial
quality outdoor fabric cleaner.
Do not dry clean or use a washing machine or dryer.
Do not steam or use water at temperatures above 30C when washing.
Do not use bleach.
Do not use solvents.
Do not use chlorine-based cleaners