








SKANDEN

OSLO PERGOLA WHITE 3X3M
558946

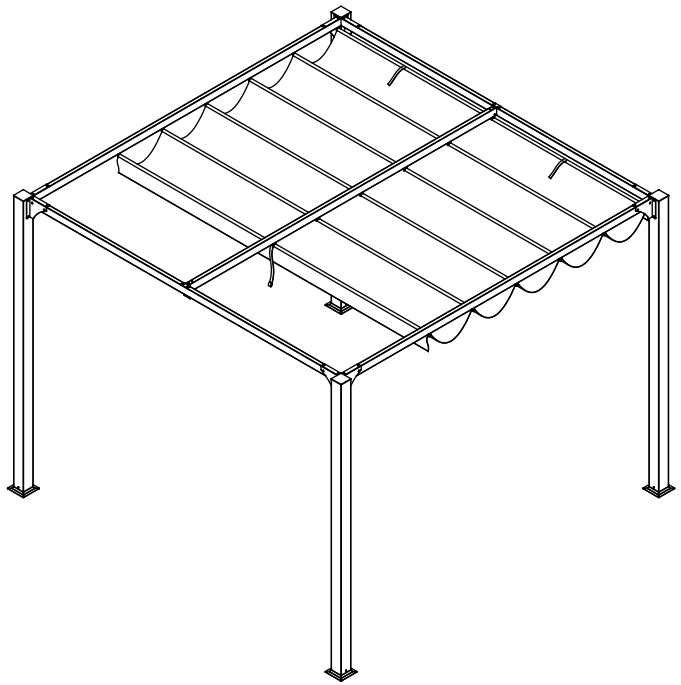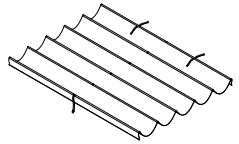


SKANDEN


A		4PCS
B		2PCS
C		2PCS
D		1PC
E		6PCS
F		6PCS
H		4PCS
J		4PCS
N		4PCS
O		2PCS
P		1PC
S		1PC

U		12PCS
v		5PCS
1#	 M6x15	68PCS
2#	 M6x38	1PC
3#	 M6	1PC
4#	 M6x18	13PCS
X		1PC
Y		16PCS
Z		1PC
T		1PC


SKANDEN

STEP 1

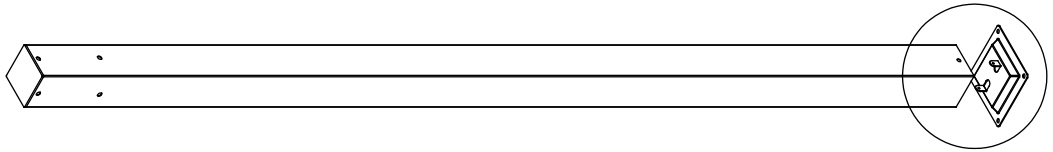


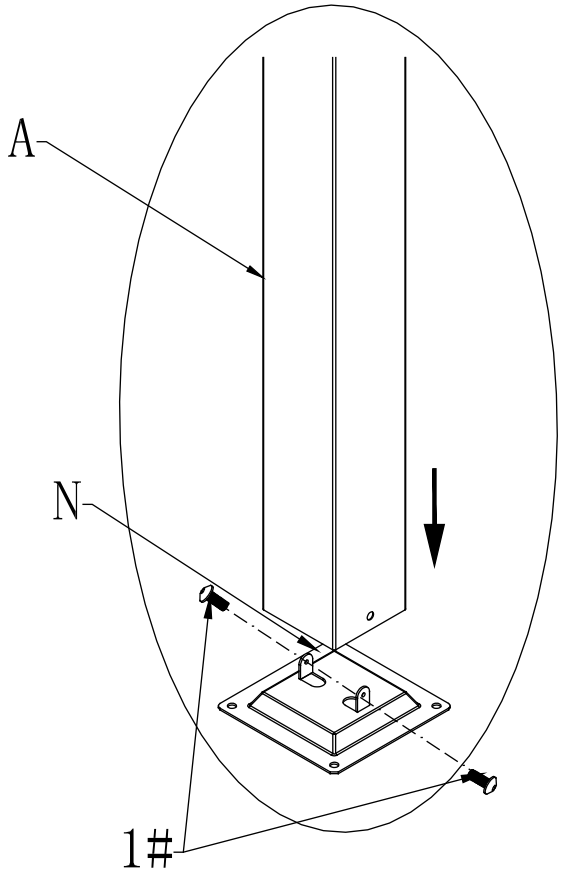


A x4pcs



N x4pcs

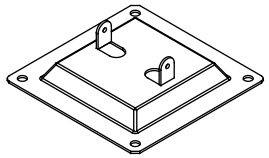



1# x8





SKANDEN






STEP 2

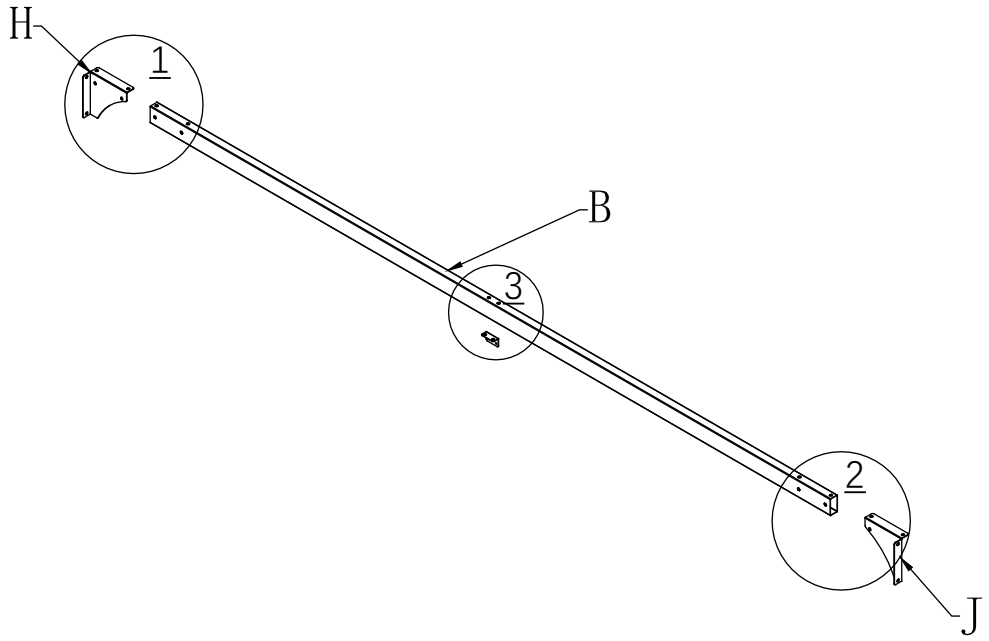

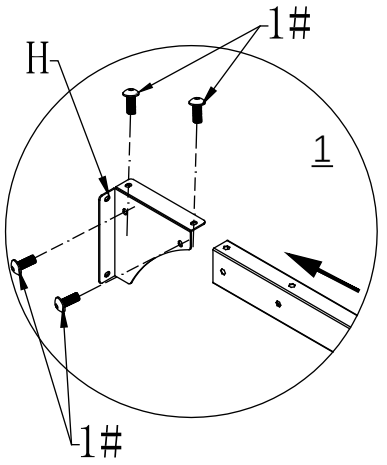

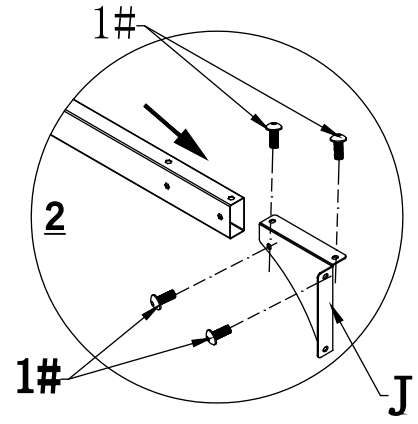


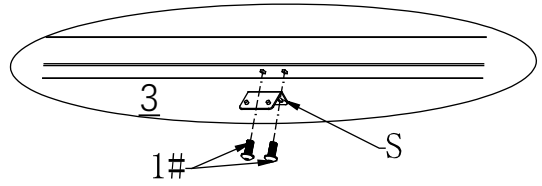


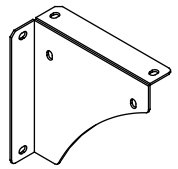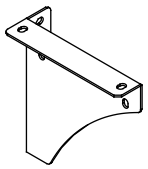B x2pcs 	H x4pcs 	J x4pcs 	1# x18 	S x1 


SKANDEN

STEP 3

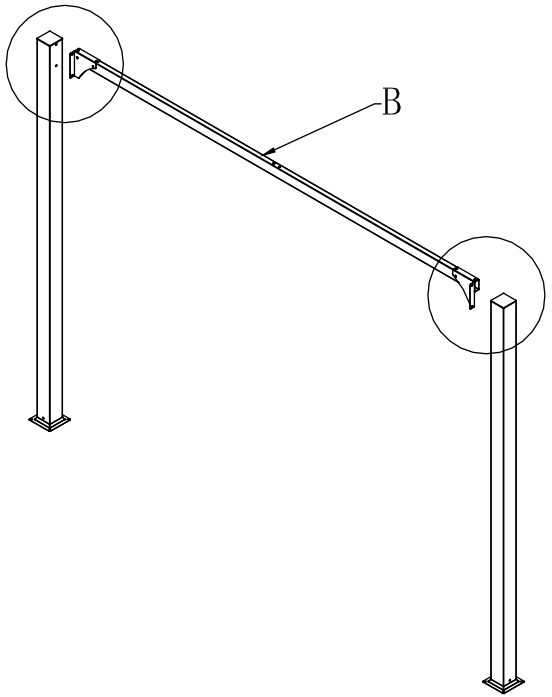

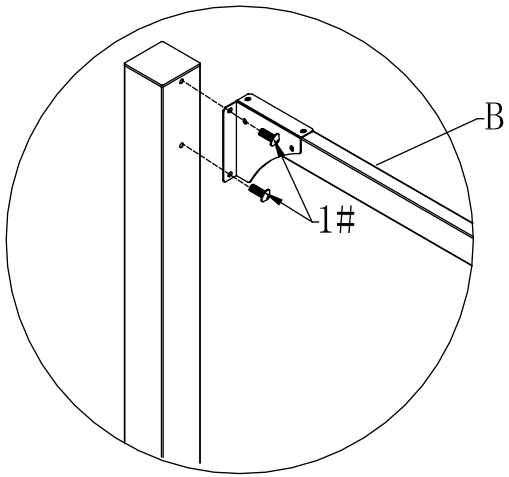



1# x8









SKANDEN

STEP 4

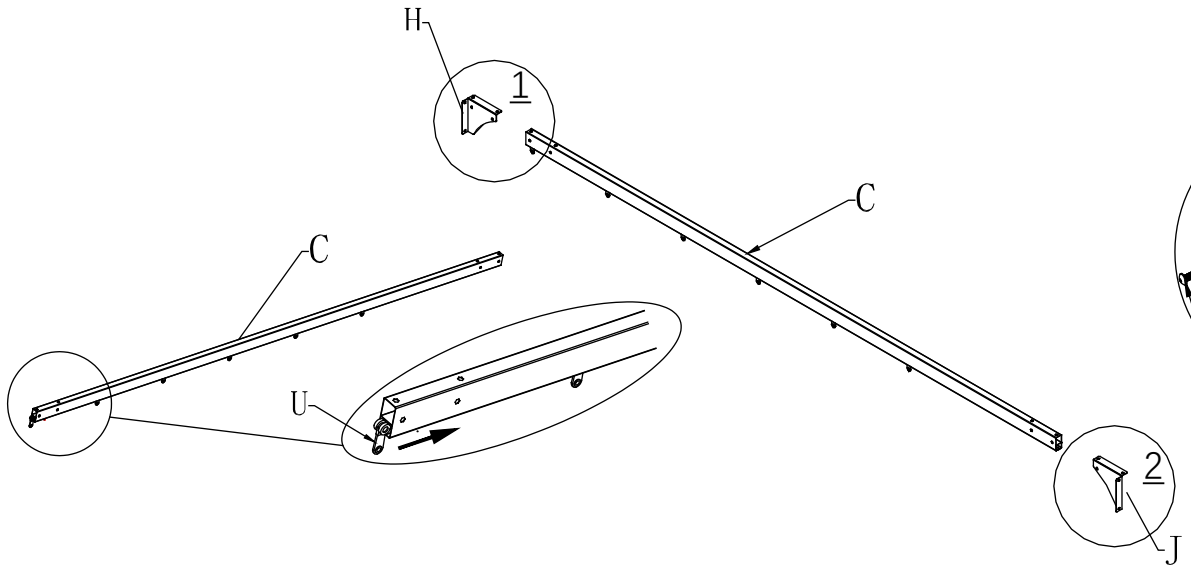

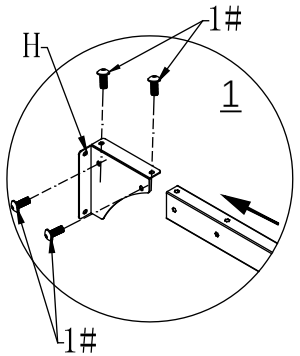


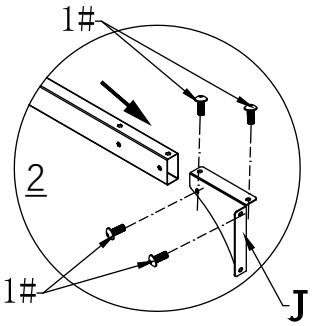


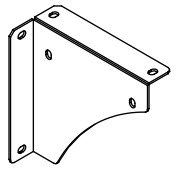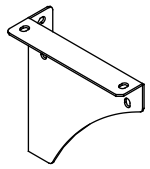C	x2pcs		H	x4pcs		J	x4pcs		U x12		1# x16	


SKANDEN

STEP 5

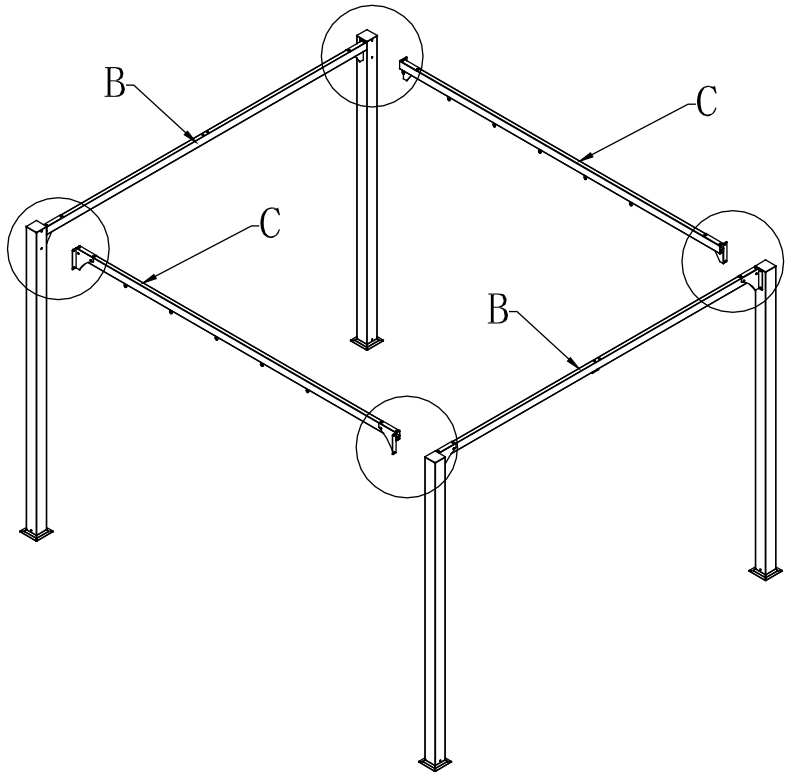

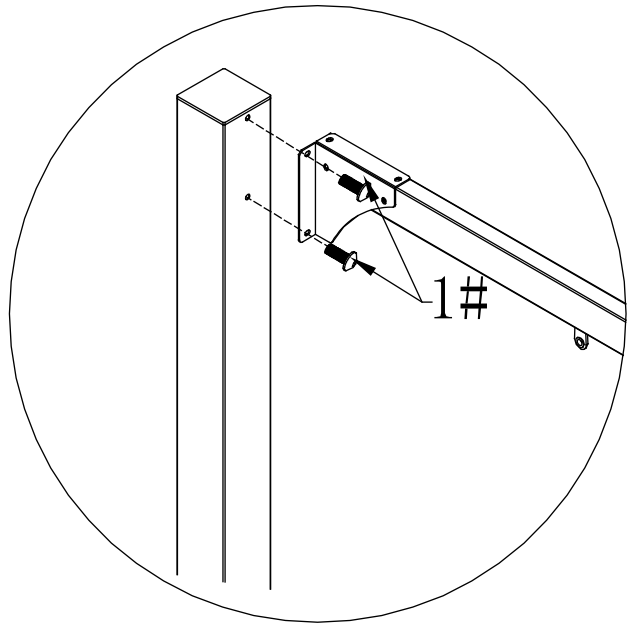



1# x8




SKANDEN

STEP 6

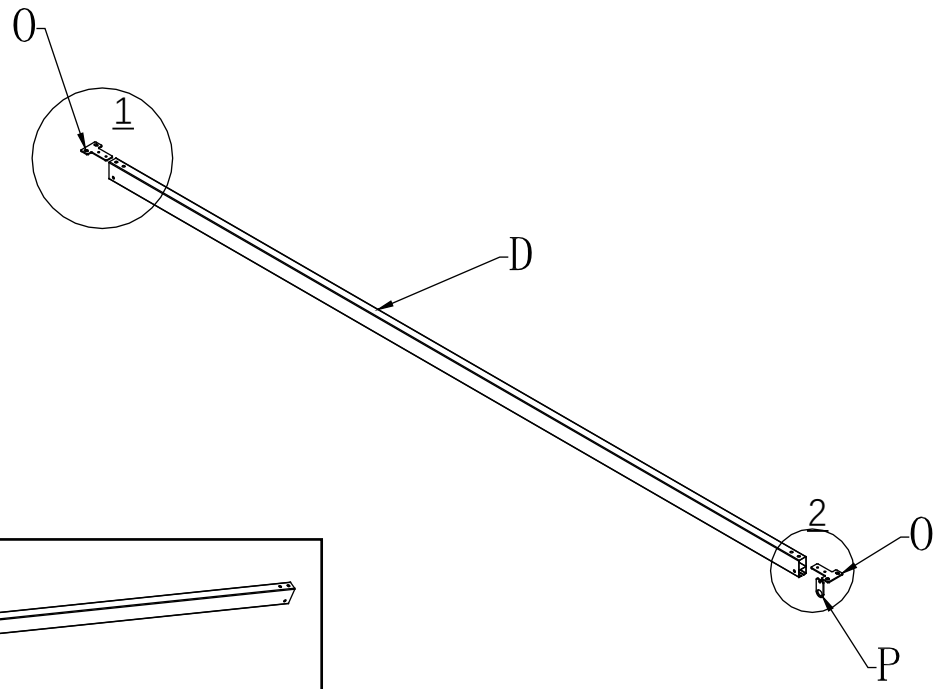


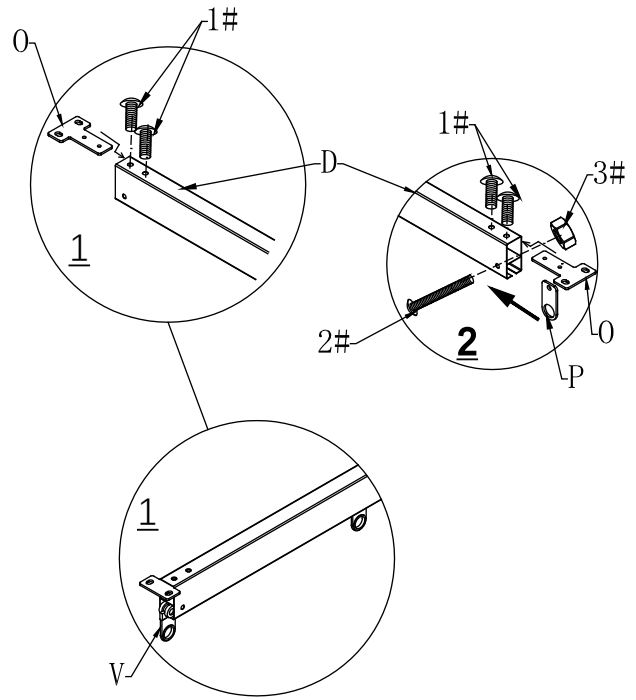


D x1pcs

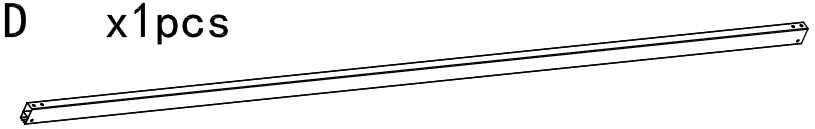


0 x2pcs

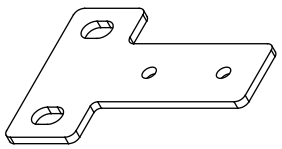


V x5pcs




P x1pcs

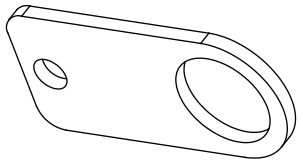


1# x4



2# x1





3# x1




SKANDEN

STEP 7

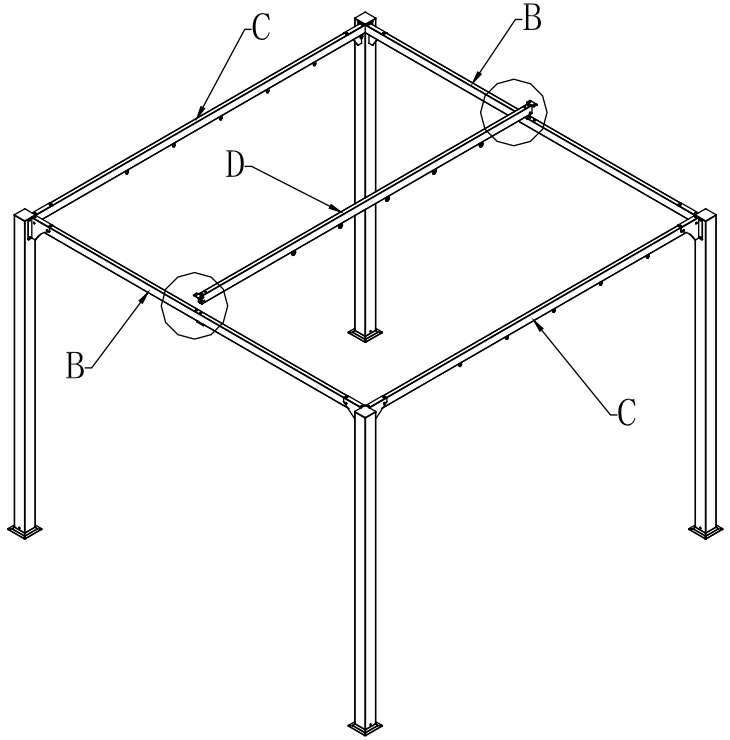

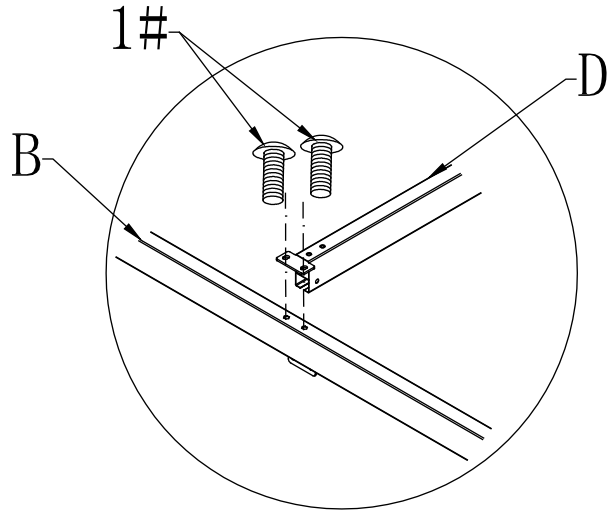



1# x4




SKANDEN

STEP 8

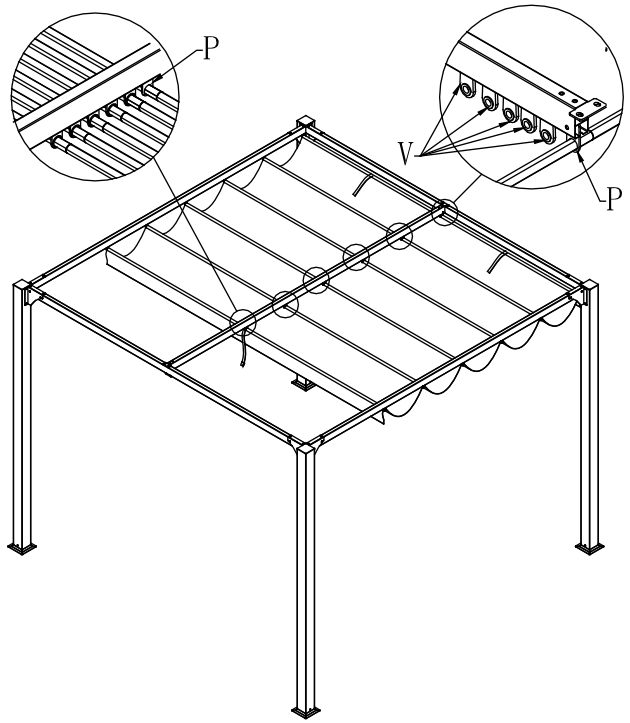


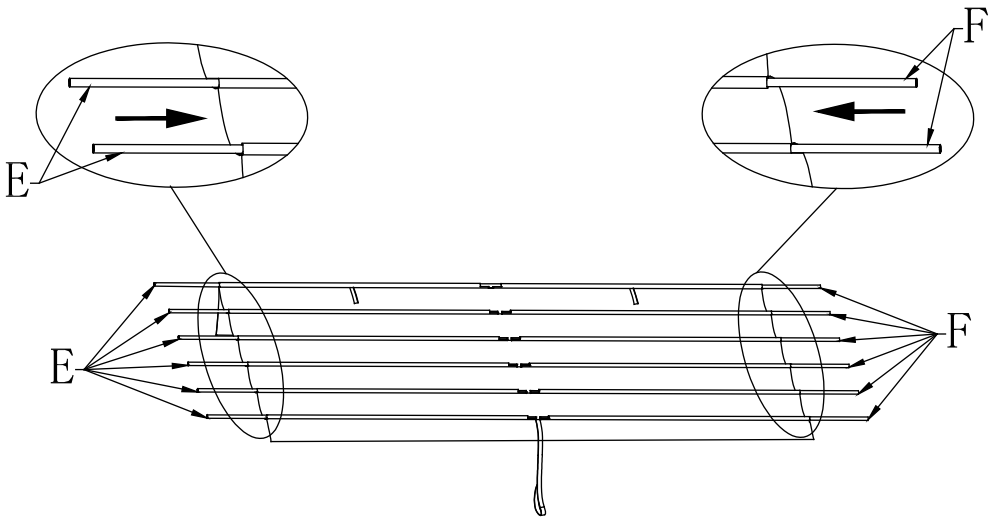


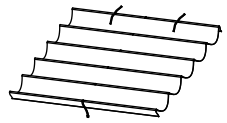E x6pcs 	F x6pcs 	T x1pcs 


SKANDEN

STEP 9

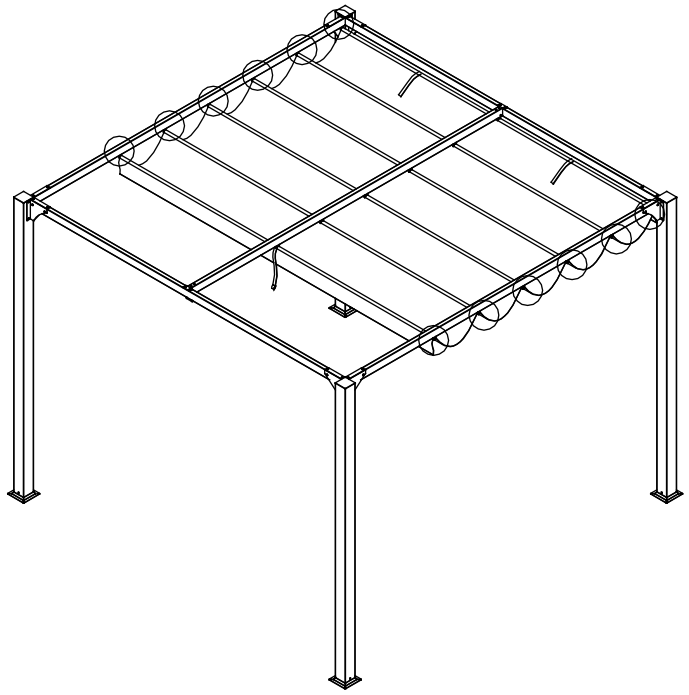

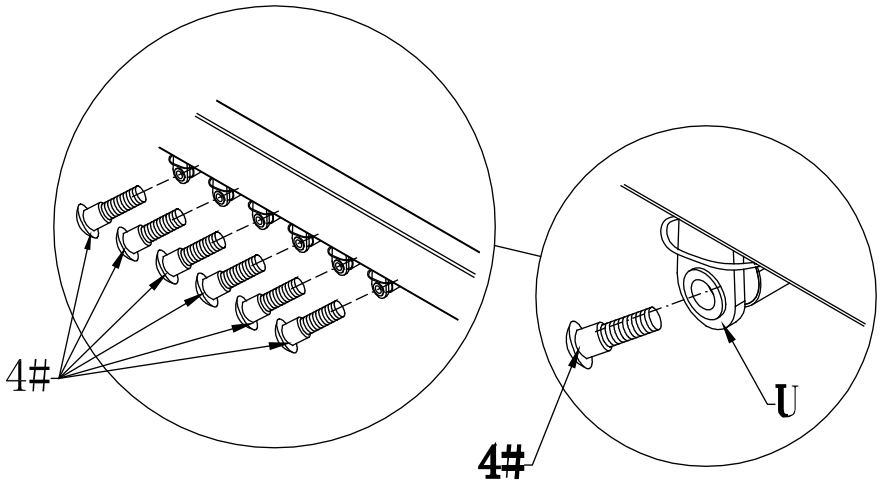



4# x12




SKANDEN

STEP 10

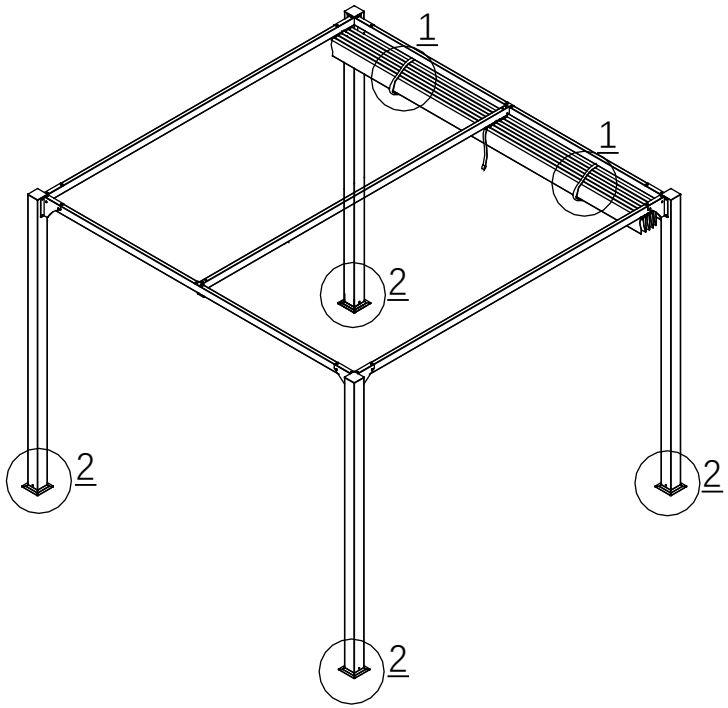

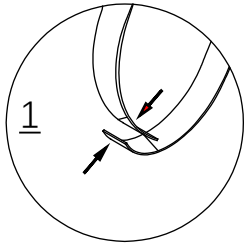

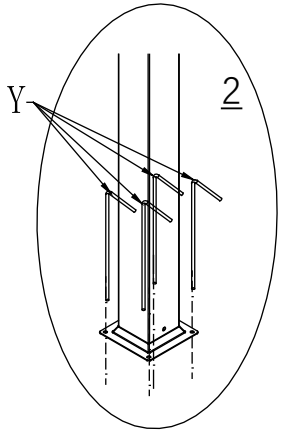

Y x16



SKANDEN

Steel/aluminium:

Daily exposure to intense ultraviolet radiation from sunlight will deteriorate the metal finish over time.
Use a furniture cover of good quality to extend the life of your furniture.
During winter time, the best is to store in a dry and well-ventilated place.
Wash your furniture with a mix of mild soap and water, rinse off and dry thorouglhy.
Apply a fine, clear automobile wax for maximum protection against harmful ultravoilet exposure and salty air.
Do not use corrosive chemicals when cleaning

Plastic rattan:

Daily exposure to intense ultraviolet radiation from sunlight will deteriorate the rattan material over time.
Use a furniture cover of good quality to extend the life of your furniture.
During winter time, the best is to store in a dry and well-ventilated place.
Wash your furniture with a mix of mild soap and water, rinse off and let it dry thorouglhy.

Acacia:

Daily exposure to intense ultraviolet radiation from sunlight will deteriorate the wood material over time.
Use a furniture cover of good quality to extend the life of your furniture.
During winter time, the best is to store in a dry and well-ventilated place.
Clean with damp, soft cloth and soap that does not contain detergents.